

Sandstrøm

Instruction Manual

10" Digital Photo Frame

S10DPF10



Contents

Unpacking the Photo Frame	4
Product Overview	5
Preparations.....	6
Attaching the Stand	6
Connecting to the Mains Power.....	7
Inserting a Memory Card / USB Flash Drive	8
Viewing Photos	9
Main Menu.....	9
Selecting the Memory Drive.....	9
Viewing Thumbnails.....	10
Playing a Slideshow	10
Using The Tool Bar	11
Changing Frame Settings	12
Troubleshooting	13
Specifications.....	14
Safety Warnings.....	15

 
Congratulations on the purchase of your new Sandstrøm Digital Photo Frame.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking the Photo Frame

Remove all packaging from the unit. Retain the packaging. If you dispose it please do so according to local regulations.

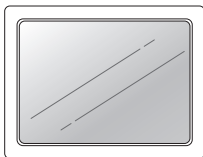


1. Digital Photo Frame



2. Photo Frame Stand
(P.N. : 27-155-06550200)



 3. Mains Adapter
(P.N. : 49-501-01001059)




4. Instruction Manual
(P.N. : 46-007-45010109)

If items are missing or damaged, please contact partmaster (UK only).
Tel: 0844 800 3456 for assistance.


GB-4

Product Overview

 Main Unit

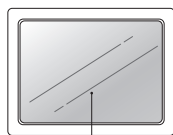

LCD Display

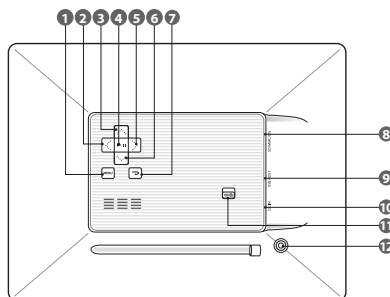 


Name	Description
1 MENU	• To access the menu mode.
2 < button	• Press to move right in the menu / thumbnail mode / option settings • To display the next photo
3 < button	• To move up in the menu / thumbnail mode / option settings
4 Play / Pause ►	• To start / pause the slideshow • To confirm a setting or function
5 > button	• To move left in the menu / thumbnail mode / option settings • To display the previous photo
6 > button	• To move down in the menu / thumbnail mode / option settings
7 Esc / > button	• To return to the main menu
8 SD/MMC/MS slot	• To accommodate SD, MMC, MS cards
9 USB host	• To accommodate USB devices such as portable USB flash drives or flash memory card readers
10 DC-IN socket	• To connect to the mains
11 ON / OFF button	• To turn the photo frame on and off
12 Stand receptacle	• To attach the supplied stand


Preparations

Attaching the Stand

 
1. Take out the stand attached at the back of the photo frame.

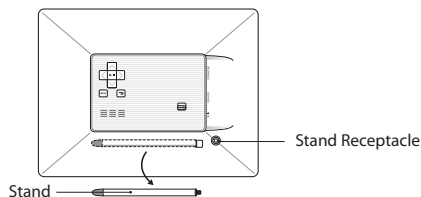

 2. Screw in the stand into the stand receptacle.

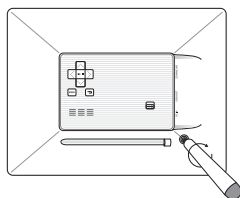

 
3. Now the stand is fixed, you can choose to display your photo frame in a landscape or portrait position.

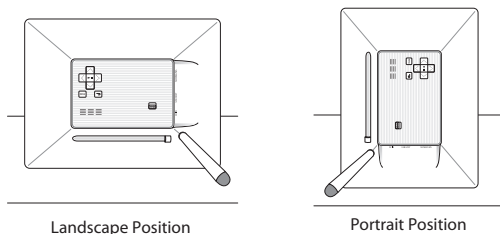


To take off the stand, unscrew it from its receptacle.

Connecting to the Mains Power

 1. Connect the supplied mains adapter (5V DC, 2A) to the photo frame, and plug in the mains adapter to the mains socket.

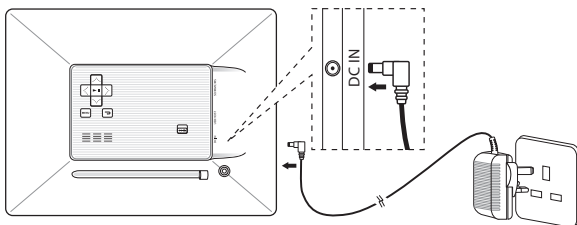

 
2. Slide the **ON/OFF** button on the photo frame to turn it on.
3. To turn off the photo frame, slide the **ON/OFF** button.

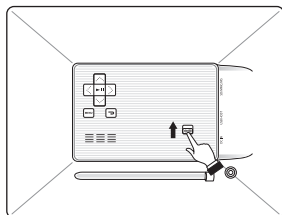

Inserting a Memory Card / USB Flash Disk

This photo frame can only display one storage media's contents at a time. If more than one storage device is connected, please refer to "Selecting the Memory Drive" and select your desired drive to be displayed in the main menu.

 
This frame can only play images (JPEG). If files in other formats are played, please use your computer to convert the images to a readable format.

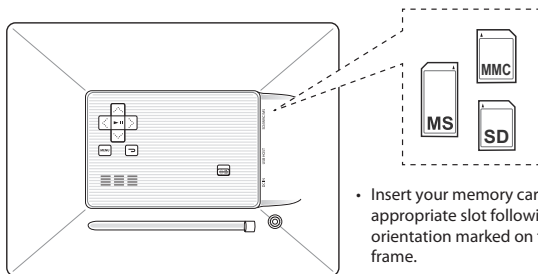

- Insert your memory card into the appropriate slot following the orientation marked on the photo frame.



 1. To remove MMC/SD/MS card, pull the card straight out.
2. Some of the newer higher capacity cards may not be compatible with this frame.

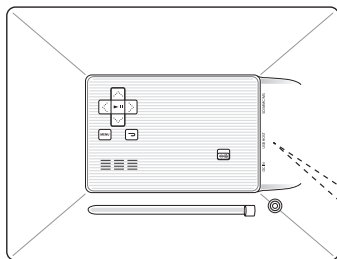


- Insert a USB drive into the USB port.



This device can only display one storage media's contents at a time. If more than one storage media is used, please refer to "Selecting the Memory Drive" section on page 9.

Viewing Photos

 Main Menu

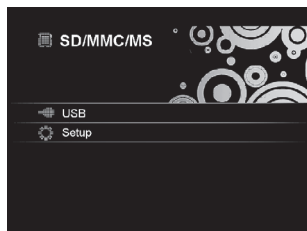

1. When a memory device is inserted into the Digital Photo Frame, the corresponding icon appears on the main menu.
2. On the main menu, you can select connected source to view photos or change frame settings.

Selecting the Memory Drive


Press the **MENU** button to access the main menu. All connected source and setup icons are displayed.

USB	Highlighted when you select a USB flash driver.
Card	Highlighted when you select a SD / MMC / MS card.
Setup	To customise the settings of Digital Photo Frame.



- In the main menu, if you insert a SD / MMC / MS card or a USB device, the frame will start to the slideshow automatically. In the slideshow mode, press the **⏮** button to return to the thumbnail page and then press the **MENU** button to access the main menu and select the memory drive.
- There is a button indicator on the right of the screen, indicating which button you are pressing.

 Viewing Thumbnails

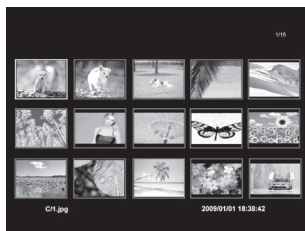

In Photo mode, the photos on the selected memory source can be displayed on the screen as thumbnails. Up to 15 photos are displayed at a time.

1. Select a memory source (e.g. USB, SD/MMC/MS) on the main menu and press the **▶||** button. The photos are displayed on the screen as thumbnails.
2. To navigate through the thumbnails or move to the next or previous page of thumbnails, press the **▲**, **▼**, **◀** or **▶** button.

Playing a Slideshow

In thumbnail mode, select a photo and then press the **▶||** button to start a slide show from the current photo. The selected photo is displayed on the screen, and a "hint" pop up window will appear to guide user.



Do not set hint time to "0" in setup menu, if you want the Photo Frame to display a hint for button operation.

- To pause the slideshow and view a single photo, press the **▶||** button. To resume the slideshow, press the **▶||** button again.
- Skip to previous or next photo, press the **◀** or **▶** button.
- Press **▲** or **▼** button to rotate a photo clockwise or counterclockwise.
- Press the **MENU** button to show tool bar.
- Press the **⏏** button to exit the slideshow and view the photos in thumbnail.


Using the Tool Bar



You also can use the OSD menu to view the photos one by one manually.

1. Press the **MENU** button during viewing a photo or slideshow. The OSD menu appears on the screen and the slideshow will pause.
2. Press the ◀ or ▶ button to navigate between the icons on the OSD menu.
 - To start or resume a slideshow from the current photo, highlight ▶ on the screen and press the ► button, and then the ▶ icon will change to || on the screen.
 - To zoom in on a photo, highlight Q on the screen and press the ► button repeatedly to magnify a photo.
 - To rotate a photo clockwise, highlight ↻ on the screen and press the ► button repeatedly.
 - To rotate a photo counterclockwise, highlight ↺ on the screen and press the ► button repeatedly.
 - To set a photo to display on full screen or standard screen if its resolution is higher than the resolution of the screen, highlight 16:9 on the screen and press the ► button.
 - To change the slideshow into 4 split screen, highlight 4 on the screen and press the ► button.
 - To delete a photo, highlight ✖ on the screen and press the ► button.
 - To exit and close the tool bar, highlight ✕ on the screen and press the ► button.

 Changing Frame Settings

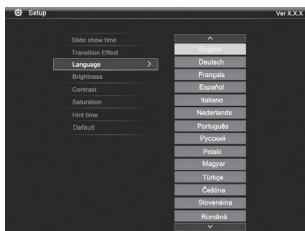

The system settings let you customize and configure your Photo Frame.

Select the **Setup** icon on the main menu and press the **▶** button. The Setup Menu appears on the screen.

1. To select a setting item, press the **▲** or **▼** button and then press the **▶** button.
2. To change the value, press the **▲** or **▼** button and then press the **▶** button. Or press **↵** button to exit.
3. Press the **MENU** button to return to the main menu.

Setting Items	Description
Slide show time	Set up the interval time for slideshow. The available options include: 3s, 5s, 15s, 1 min, 15min.
Transition Effect	Set up the style of transition while playing a slide show.
Language	Set up the display language.
Brightness	Adjust the brightness of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Contrast	Adjust the contrast of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Saturation	Adjust the saturation of the screen. The available options include: 3, 2, 1, 0, -1, -2, -3.
Hint time	Set how long to display the hint for button operation while playing a slideshow. The available options include: 0s, 5s, 10s, 20s.
Default	Reset all settings to the default settings.

Troubleshooting

No power

- Check to make sure the mains plug is plugged into the mains socket.
- Make sure there is power in the mains socket.

Unable to view photos on the Digital Photo Frame

- Not all JPEG files are compatible. Please open the files in a computer and resave them as JPEG files and then try to playback in the photo frame.
- Check if the memory card is compatible.

If the photo display is distorted or cannot display properly

- Go to the main menu, then the SETUP and change the display mode to match your photo (Full / Standard).

If photo display seems slow

- Use lower resolution photos.

The image is distorted or blurred.

- Resolution of the image is too low. Try playing a file with a higher resolution. Resolution of 800 X 600 pixels is recommended.

Cannot detect any external device via the USB 2.0 A-Type port

- This photo frame only support a USB flash drives and it does not support any external hard disks or MP3 player via the USB port.

The photo frame does not work properly

- Please switch off the photo frame and on again.

Specifications

Display	Digital LCD, TFT Panel size: 10 inches Screen aspect ratio: 4:3 Resolution: 1024*768 pixels
I/O	DC in
Power Supply	AC Adapter (Input: 100~240V AC, 50~60Hz; Output: DC 5V 2A)
USB Port	USB Host 2.0 (High Speed) Supports USB flash media USB Max Load : DC 5V, 400mA
Supported Peripheral Devices	SD™ (Secure Digital Card), MMC™ (MultiMedia Card), MS™ (Memory Stick)
Supported Photo Format	JPEG only
Storage Condition	Humidity <95%, -20~60°C
Working Condition	Humidity <80%, 0~45°C
Size L x W x H : (mm)	265.5 x 215 x 22.5 mm
Weight (g)	638.6g

Features and specifications are subject to change without prior notice.

Safety Warnings

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all the instructions and retain this instruction manual.
- Ensure that all electrical connections (including the mains adaptor and power cable) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains adaptor before making or changing connections.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your photo frame.
- Do not allow the photo frame to be exposed to dripping or splashing.
- Never store in hot or very cold areas. Recommended operating temperature is 0~40°C.
- Do not use the photo frame in areas with high moisture (e.g. bathroom) or dusty areas.
- Do not place hot objects or naked flame sources such as lighted candles or night lights on or close to the photo frame. High temperatures can melt plastic and lead to fires.
- Do not obstruct the ventilation openings of the photo frame with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the photo frame.
- Do not handle the power cable with wet hands.
- Be careful with the LCD panels on the photo frame.
- Only use attachments/accessories specified by the manufacturer.
- When the photo frame is not in use or unattended for a long period of time, disconnect it from the mains socket.
- Do not remove any fixed cover as this may expose dangerous voltages.
- Do not continue to operate the photo frame if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains adaptor and consult your dealer.
- Never let anyone especially children push anything into holes, slots or any other opening on the case - this could result in a fatal electrical shock.
- Route the power cable so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear, tear or heat.

Note about LCD screen

The LCD screen is manufactured using high-precision technology. However, some tiny black points and/or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal.

Note: If you require a replacement for any of the items listed below, please quote their corresponding part numbers:

Replacement Part	Part Number
Photo Frame Stand	27-155-06550200
Mains Adapter	49-501-01001059
Instruction Manual	46-007-45010109



next day. Visit www.partmaster.co.uk or call 0844 800 3456 (UK customers only)
Calls charged at National Rate.

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

DSG Retail Ltd • Maylands Avenue • Hemel Hempstead
Herts • HP2 7TG • England

(P.N.: 46-007-45010109)



